



# Tower Fan with Timer

Please read these instruction carefully before operating the fan

## How to Assemble

1. Loosen the 2 screws provided at the bottom of the main fan body.
2. Pass the power cord through the slot in the base and then lock the two sections of the base together as shown in Fig 1
3. Insert the fan body into the base, and secure in position with the screws provided.
4. Route the power cord through the rear base section and secure cord with cable clamp and screws supplied.

  Fig.1

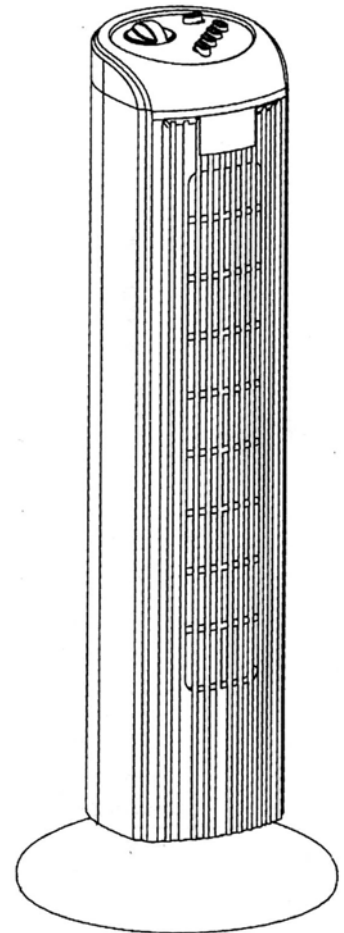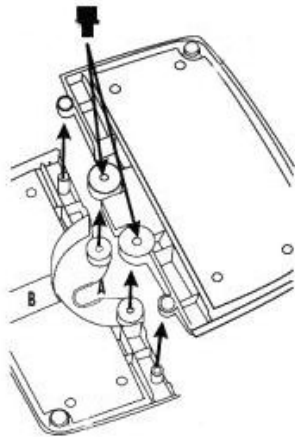

## **Safety and Guidance notes**

- Ensure that the voltage marked on the fan agrees with your mains voltage.
- The fan must NOT be used in a bathroom
- Always ensure that a fuse approved to BS 1362 is fitted and that it is the correct rating for the appliance.
- Never insert any objects through the guard when the fan is running
- Always disconnect the fan before any cleaning is carried out.
- Make sure that the fan is on a level dry surface when operating to avoid overturning.
- Do not use the fan near an open window or door (Rain may create an electrical hazard).
- DO NOT immerse in water or other liquids.
- This appliance is not intended for use by young children or infirm persons without supervision.
- DO NOT operate in the presence of explosives and/or flammable fumes
- Use the fan only for interior household use as described in this manual.
- DO NOT use outdoors.
- Always unplug the fan before moving it, cleaning or whenever the Electric fan is not in use.
- Always make sure that the fan is sited on a dry stable level surface.
- DO NOT use this fan with any solid-state speed control devices
- DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. (The inside of this unit contains no user serviceable parts).
- Keep the unit away from heated surfaces and open flames
- Keep the supply cord out of heavy traffic areas.
- Never put the cord under rugs, near radiators, stoves or heaters

**If in doubt consult a qualified electrician**

**CAUTION: The fan should not be operated without a base, or used laying on its side.**

**CAUTION : DO NOT operate the fan if it has a damaged cord/plug or has been dropped or damaged in any manner. (If this occurs consult a qualified electrician/service engineer)**

## **How to Use**



### **Speed Adjustment**

To adjust the speed of the fan, Simply push one of the 3 speed selector buttons

0 ---- OFF      1 ---- LOW      2 ---- MED      3 ---- HIGH

### **Oscillation function**

Oscillation is operated by pushing the "OSCILLATION" button as follows:-

 Downward----To Start (ON)       Upward----To Stop (OFF)


Note:-The fan will not oscillate when the speed control button is set at "0", or the timer dial is set at "OFF".

### **Timer Function**

The timer can be set to switch off the fan by turning the dial to the desired setting. (0-120 Minutes)  
When the timer is not in use set the dial to the **ON** position. If the dial is set to the **OFF** position the fan will not operate.

### **Cleaning**

- Always unplug the fan before cleaning or maintenance
- DO NOT allow water on or into the electrical motor housing
- We recommend the periodic cleaning of this fan by lightly running a vacuum cleaner nozzle over the grille of the fan to remove any dust or dirt that may have accumulated inside or on the fan.
- Using a soft, moist cloth, with a mild soap solution, carefully clean the fan housing. Please use caution around the grille. DO NOT allow the motor or other electrical components to be exposed to water.

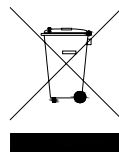

**This product should not be disposed of with household waste.  
Please recycle where facilities exist.  
Check with your local authority for recycling advice**